

Windows

LabVIEW™ Installation Guide

Before You Begin

- **Is your software part of a Volume License Agreement (VLA)?** Contact your VLA administrator for installation instructions.
- **Are you upgrading from a previous version of LabVIEW?** Refer to the *LabVIEW Upgrade Notes* on the LabVIEW Platform media for information about protecting existing VIs and projects before installing a new version of LabVIEW.

1

Install LabVIEW, Modules, and Toolkits



- Insert the LabVIEW Platform media and follow the onscreen instructions.
- When prompted, enter the serial number for each product you want to activate. Locate each serial number on the software package or *Certificate of Ownership*.

Note:

- Application Builder requires its own serial number only if you purchased the LabVIEW Base or Full Development System.
- The LabVIEW Platform media does not include LabVIEW (64-bit), which has limited module and toolkit support. For more information about LabVIEW (64-bit), visit ni.com/info and enter the Info Code **LabVIEW64Bit**.

2

Install NI Device Drivers



- Insert the NI Device Drivers media when the installer prompts you to **Install Hardware Support** or after LabVIEW finishes installing.
- Select drivers for any hardware with which you want to use this version of LabVIEW.

Note: If you cannot locate a particular driver on the **Features** screen of the installer, use the driver media packaged with the device or download the latest version of the driver from ni.com/drivers.

3

Install Hardware



Refer to your device documentation, such as printed manuals or PDFs, for information about installing your NI hardware.

Problems Installing LabVIEW?

For answers to common questions about installing LabVIEW and NI device drivers, refer to ni.com/gettingstarted or the *LabVIEW Installation Troubleshooting Guide* ([troubleshooting_guide.html](http://ni.com/troubleshooting_guide.html)) on the LabVIEW Platform media.

Refer to the *NI Trademarks and Logo Guidelines* at ni.com/trademarks for more information on National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: **Help>Patents** in your software, the **patents.txt** file on your media, or the *National Instruments Patents Notice* at ni.com/patents. You can find information about end-user license agreements (EULAs) and third-party legal notices in the **readme** file for your NI product. Refer to the *Export Compliance Information* at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2012–2015 National Instruments
All rights reserved.

Printed in Ireland.



375842F-01

Dec15