


# **DATASHEET**

# Infrared Receiver Module IRM-36XXJM Series



Pin Configuration

- 1. Vout
- 2. GND
- 3. Vcc

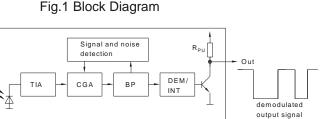

#### **Features**

- · Circular lens for improved reception characteristics
- Available for various carrier frequencies
- Low operating voltage and low power consumption
- · Optimized immunity against TFT backlight interferences
- · High immunity against ambient light
- Long reception range
- High sensitivity
- Pb free and RoHS compliant
- Compliance with EU REACH
- Compliance Halogen Free (Br < 900 ppm, Cl < 900 ppm, Br+Cl < 1500 ppm)

#### **Description**

The IRM-36xxJM devices are DIP type infrared receivers which have been developed and designed by using the latest IC technology, providing compatibility to most common IR protocols.

modulated

IR signal

The PIN diode and preamplifier are assembled onto a lead frame and molded into a black epoxy package which operates as an IR filter. The demodulated output signal can directly be decoded by a microprocessor.

### **Applications**

- AV equipment such as TV, VCR, DVD, CD, MD, etc.
- · CATV set top boxes
- Multi-media Equipment
- Other devices using IR remote control



#### Part number table

Model No.	Carrier Frequency f <sub>c</sub>
IRM-3636JM	36 kHz
IRM-3638JM	38 kHz
IRM-3640JM	40 kHz
IRM-3656JM	56 kHz

# Absolute Maximum Ratings (T<sub>a</sub>=25°C) (note1)

Parameter	Symbol	Rating	Unit
Supply Voltage	V <sub>cc</sub>	0 ~ 6	V
Output current	l <sub>оит</sub>	0 ~ 5	mA
Operating Temperature	T <sub>opr</sub>	-20 ~ +80	°C
Storage Temperature	T <sub>stg</sub>	-40 ~ +85	°C
Soldering Temperature (note2)	T <sub>sol</sub>	260	°C

# Electro-Optical Characteristics (T<sub>a</sub>=25°C, V<sub>cc</sub>=5V)

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition	
Current consumption	Icc	0.10	0.27	0.6	mA	No input signal	
Supply voltage	Vcc	2.7		5.5	V		
Peak wavelength	$\lambda_p$		940		nm		
High level output voltage	V <sub>OH</sub>	Vcc-0.4	Vcc		V	Output open	
Low level output voltage	$V_{OL}$			0.4	V	I <sub>OUT</sub> ≦2.5mA	
Max Reception range	L <sub>0max</sub>	14	20		<sub>m</sub> acco	Test signal	
	L <sub>45max</sub>	7	10			according to figure 2 Output pulse width: 450us <tl<750us 450us<th<750us<="" td=""></tl<750us>	
Min reception distance	L <sub>0min</sub>			0.1			
Half angle(horizontal)	$\phi_h$		±45		deg		
Half angle(vertical)	φν		±45		deg		
Output low pulse	TL	450		750	us		
Output high pulse	Тн	450		750	us	method,	

Note1: Absolute Maximum Ratings indicate limits beyond which damage to the device may occur.

Note2: 4mm from mold body for less than 5 seconds



#### **Test method**

The specified electro-optical characteristics are valid under the following conditions.

- 1. Measurement environment must be a place without extreme reflections
- 2. Transmitter radiant intensity I<sub>e</sub> = 80mW/sr
- 3. External lighting contains LED lighting with a color temperature of 6000K and illumination at the IR receiver is less than 100lux (Ev≤ 100Lux))
- 4. Test signal as shown below in figure 3

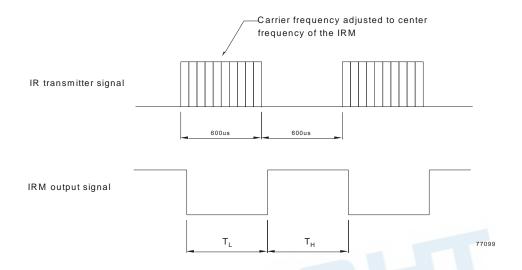


Fig.2 test signal and IRM output signal for reception distance and viewing angle test

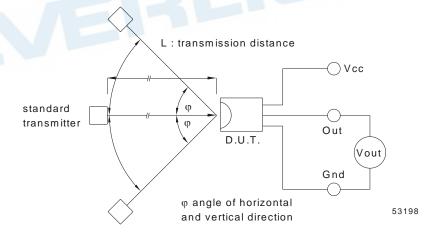


Fig.3 Measuring System



## **Typical Electro-Optical Characteristics Curves**

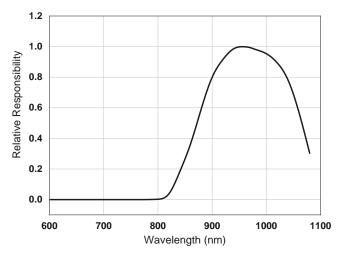


Fig. 4 Relative Responsibility vs. Wavelength

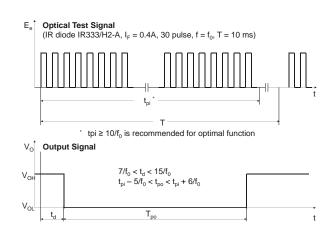


Fig. 5 IR Signal vs. Output Signal



Fig. 6 Output Pulse Width and Sensitivity in Dark Ambient

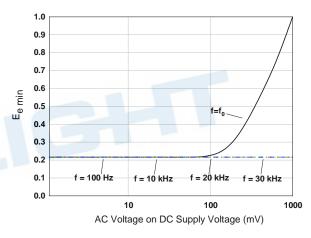


Fig. 7 E<sub>e min.</sub> vs. Supply Voltage Disturbances

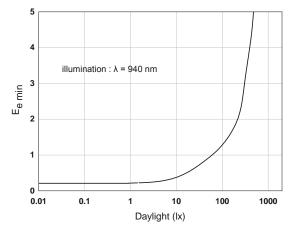


Fig. 8 Daylight vs. E<sub>e min.</sub>

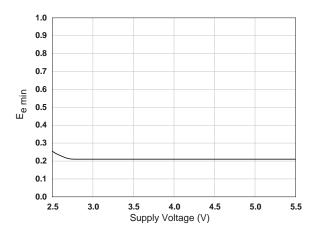


Fig. 9 Ee min. vs. Supply Voltage

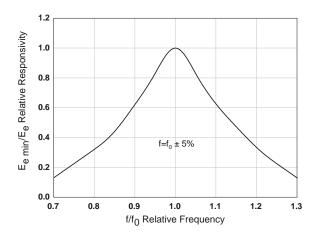
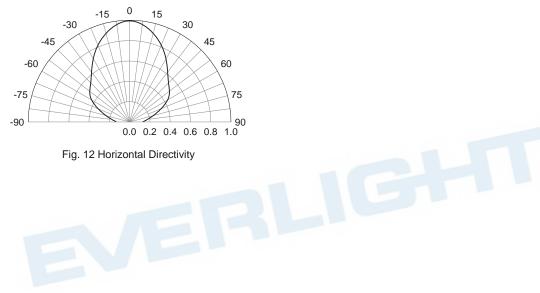


Fig. 10 Frequency Dependence of Responsivity



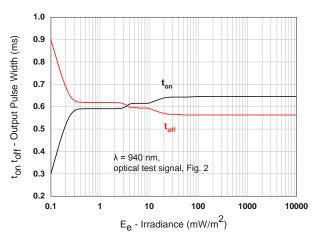


Fig. 11 Output Pulse Diagram



#### **Application considerations**

IRM IR receiver modules are high gain analog components to reach a long reception range. However, due to the high gain, they are also sensitive to noise from the power supply like  $V_{\rm cc}$  ripple. Noise on the power supply can reduce the reception range of the IRM or cause output glitches and corrupted data. To protect the IRM receiver from power supply noise, a RC filter must be connected as close as possible to the  $V_{\rm cc}$  and GND pins of the IRM. The circuit below in figure 9 shows the configuration of the RC filter and the required values. Ceramic or tantalum capacitor should be used, as standard electrolytic capacitors are only suitable for low frequencies and might not be able to filter noise in the frequency range of the IRM. The IRM receiver is most sensitive to noise which is at the carrier frequency or close to the carrier frequency. When using a switching mode power supply, the switching frequency must not be the same as the carrier frequency of the IRM. A gap of at least 20kHz between the switching frequency of the power supply and the IRM carrier frequency is recommended.

If the trace from the IRM output pin to the decoder IC on the PCB is long, the parasitic capacitance might be high causing slow rise times of the IRM output signal. In such case, an additional pull up resistor of 10kOhm or higher can be added at the IRM output to reduce the influence of parasitic trace capacitance.

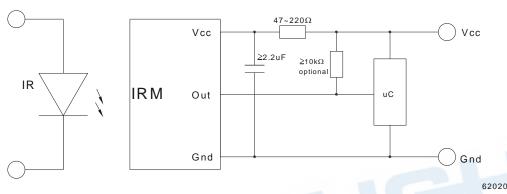


Fig.13: application circuit

## **Code compatibility**

The IRM-36xxJM receiver modules are mainly designed for remote control applications which require very high noise immunity. Hence the IR code compatibility is matched for the most common IR protocols. To guarantee a proper data signal reception, a few points need to be taken into consideration.

The signal transmission must be carried out in data packages with limited length followed by a data pause time of a certain length. Continuous data transmission is not applicable as such kind of signal will be judged as noise and suppressed after a short time. Table1 below shows the compatibility to most commonly used IR protocols. If an IR protocol is not listed in this table, the compatibility needs to be checked according to the burst times, gap times, data package length and data pause time. The required limits for these items are shown in table 2 "acceptable IR signal timings".

Protocol	Suitable	Protocol	Suitable	Protocol	Suitable
NEC	Yes	Sharp	Yes	RCMM	Yes
RC5	Yes	Mitsubishi	Yes	XMP	Yes
RC6	Yes	RCA	Yes	Continuous <sup>(note3)</sup>	Yes
Toshiba	Yes	RECS-80	Yes		

Note 3: Continuous code need less than T<sub>B max</sub>

Table 1: IR protocol compatibility

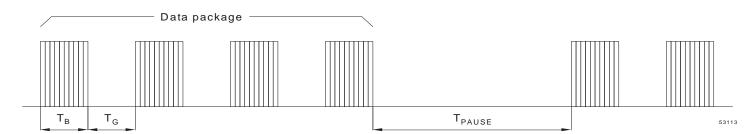


Fig.14: general IR data structure

	IRM-3636JM IRM-3638JM IRM-3640JM IRM-3656JM
Min burst length T <sub>B_min</sub>	150 us
Max burst length T <sub>B_max</sub>	700 us
Min gap time after each burst (For bursts less than 700usec)	275us
Min gap time in the data stream (For bursts greater than 700 usec )	T <sub>pause</sub> > (2×burst length) + 30msec
Maximum number of continuous data	2000 Bit/ second


Table 2: acceptable IR timings

## Operation under noisy environment

The IRM-36xxJ14S28 receiver modules are designed for high light noise immunity, especially for noise from fluorescent and energy saving lamps and noise from TFT TVs with CCFL backlight. The receiver is able to suppress most optical noise, but the presence of any kind of optical noise will cause shorter reception range because the AGC will reduce the gain to suppress the noise.

The presence of noise can also affect the output pulse jitter. In such case, the output pulse jitter shown in the electro-optical specification above, might not be valid anymore and bigger pulse jitter can occur. This behavior needs to be considered when tuning the timing limits of the decoder. It is recommended to use the output pulse variation shown in the electro-optical specifications above as a base to set the timing limits of the decoder. However, due to different protocols and environmental conditions, other timing limits might result in better performance and decoding security. This needs to be verified for the specific application by testing under different noise conditions.

#### **Device Marking**

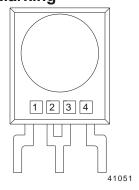


#### **Notes**

- 1 denotes Year code
- 2 denotes Month code
- 3 denotes Device number
- 4 denotes Carrier frequency



# **Package Dimenstions**

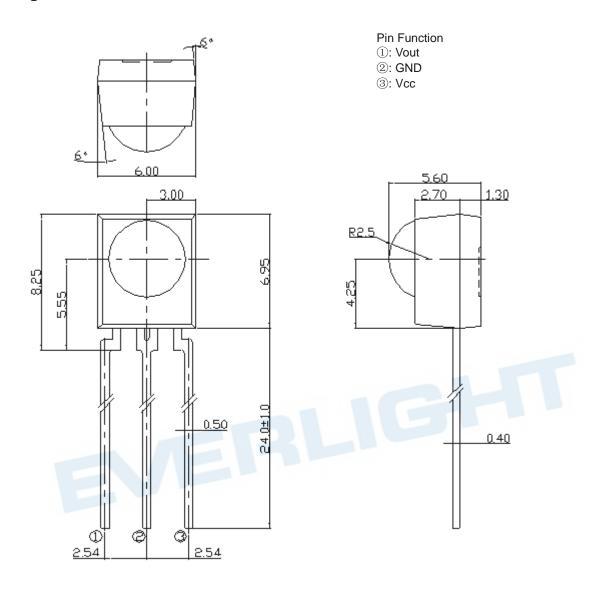

#### Notes:

- 1. All dimensions are in millimeters.
- 2. Tolerances unless dimensions ±0.5mm.

## **Packing Quantity**

250 pcs / Bag 6 Bags / 1Box 10 Boxes / Carton



## Recommended method of storage

The following are general recommendations for IRM with metal shell storage and use:

- 1. Do not open package bag before devices are ready to use.
- 2. Sealed package bag suggested to be stored at 10°C~30°C and ≤ 60%RH.
- 3. After opening the package, the devices must be stored at 10°C~30°C and ≤ 60%RH, and suggested to be used within 24 hours or as soon as possible. Besides, suggest that the remaining devices seal in the package bag as soon as possible please.

#### **DISCLAIMER**

- 1. EVERLIGHT reserves the right(s) on the adjustment of product material mix for the specification.
- 2. The product meets EVERLIGHT published specification for a period of twelve (12) months from date of shipment.
- 3. The graphs shown in this datasheet are representing typical data only and do not show guaranteed values.
- 4. When using this product, please observe the absolute maximum ratings and the instructions for using outlined in these specification sheets. EVERLIGHT assumes no responsibility for any damage resulting from the use of the product which does not comply with the absolute maximum ratings and the instructions included in these specification sheets.
- 5. These specification sheets include materials protected under copyright of EVERLIGHT. Reproduction in any form is prohibited without obtaining EVERLIGHT's prior consent.
- 6. This product is not intended to be used for military, aircraft, automotive, medical, life sustaining or life saving applications or any other application which can result in human injury or death. Please contact authorized Everlight sales agent for special application request.